


BLAC-RAC **AR** Retention Post Installation

Open **BLAC-RAC** unit and remove weapon.

For ease of removal of existing hardware and installation of the new **AR Retention Post**, it is recommended to adjust the **BLAC-RAC** to its widest point.


Refer to Section 8 of the 1082 manual, which can be found on our website under instructions.

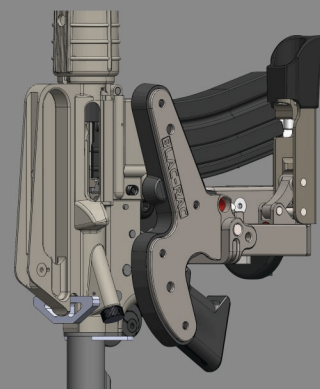


Using a 1/4" Allen wrench, remove the 5/16"-18 bolt. Remove the Trigger Post once bolt is out. 5/16" bolt will be used to install the **AR Retention Post**.

Using a 5/32" Allen wrench, remove the 1/4"-20 shoulder bolt. Remove the Eccentric Post once bolt is out. (It is no longer needed)

Once removed, **BLAC-RAC** should look like figure 3.

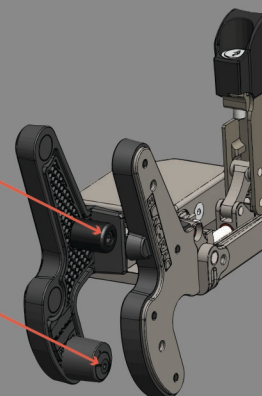

If you have a drop down trigger guard, similar to the **BLAC-RAC Alta** shown below, it is recommended to cut the rubber section shown in red and remove from the pad with a utility knife.

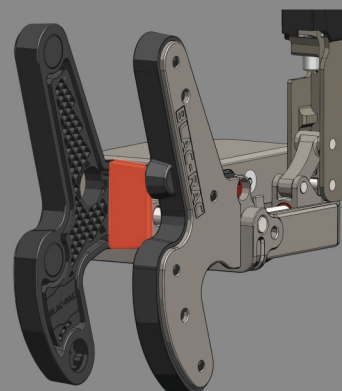

Place **AR Retention Post** in hole where trigger post was removed. Insert 5/16"-18 bolt and tighten. Ensure the AR retention post is installed as shown in figure 4b.

Install 1/4"-20 bolt with washer and plug as shown in figure 4a where eccentric post was removed.

